



COIN DOOR SCHEMATIC (030401-01 B)

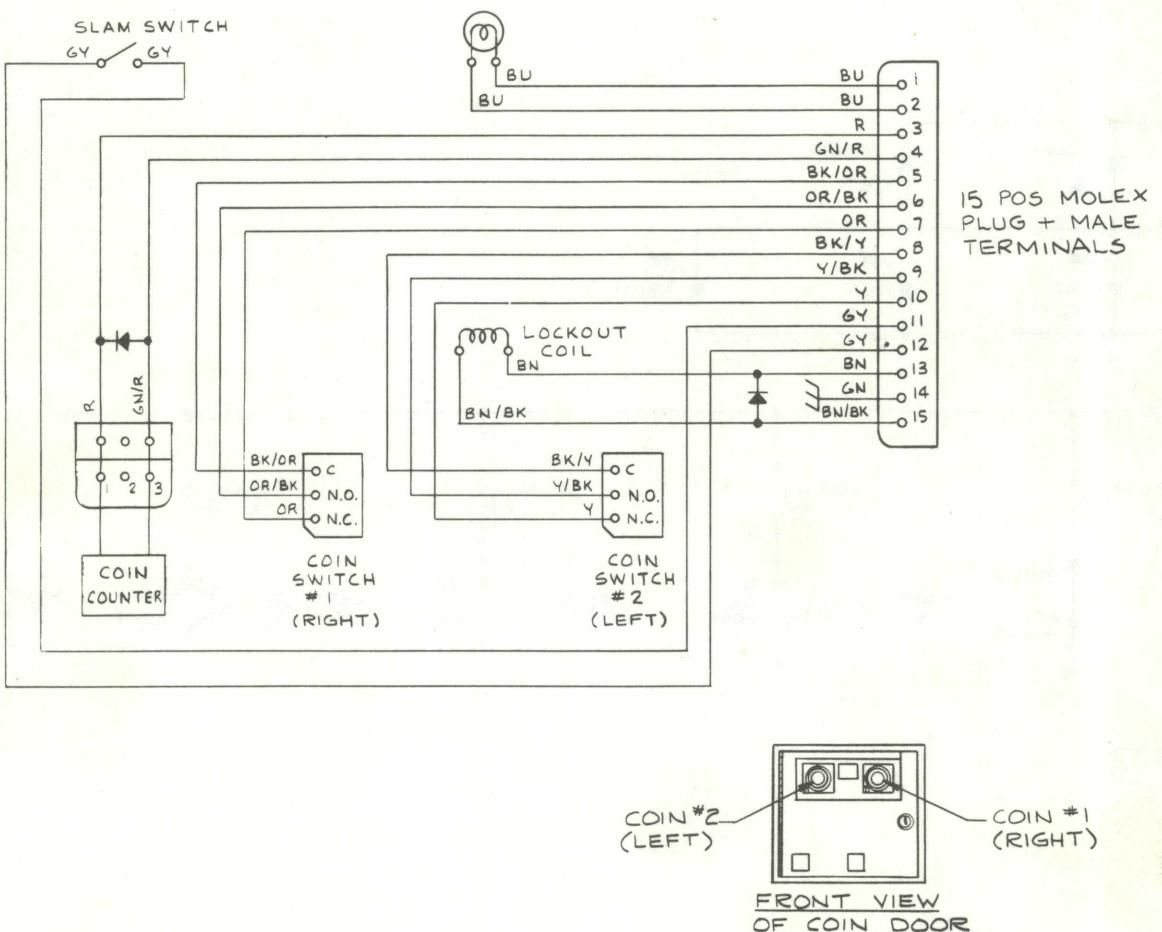

REGULATOR/AUDIO PCB SCHEMATIC (034485-01 C)

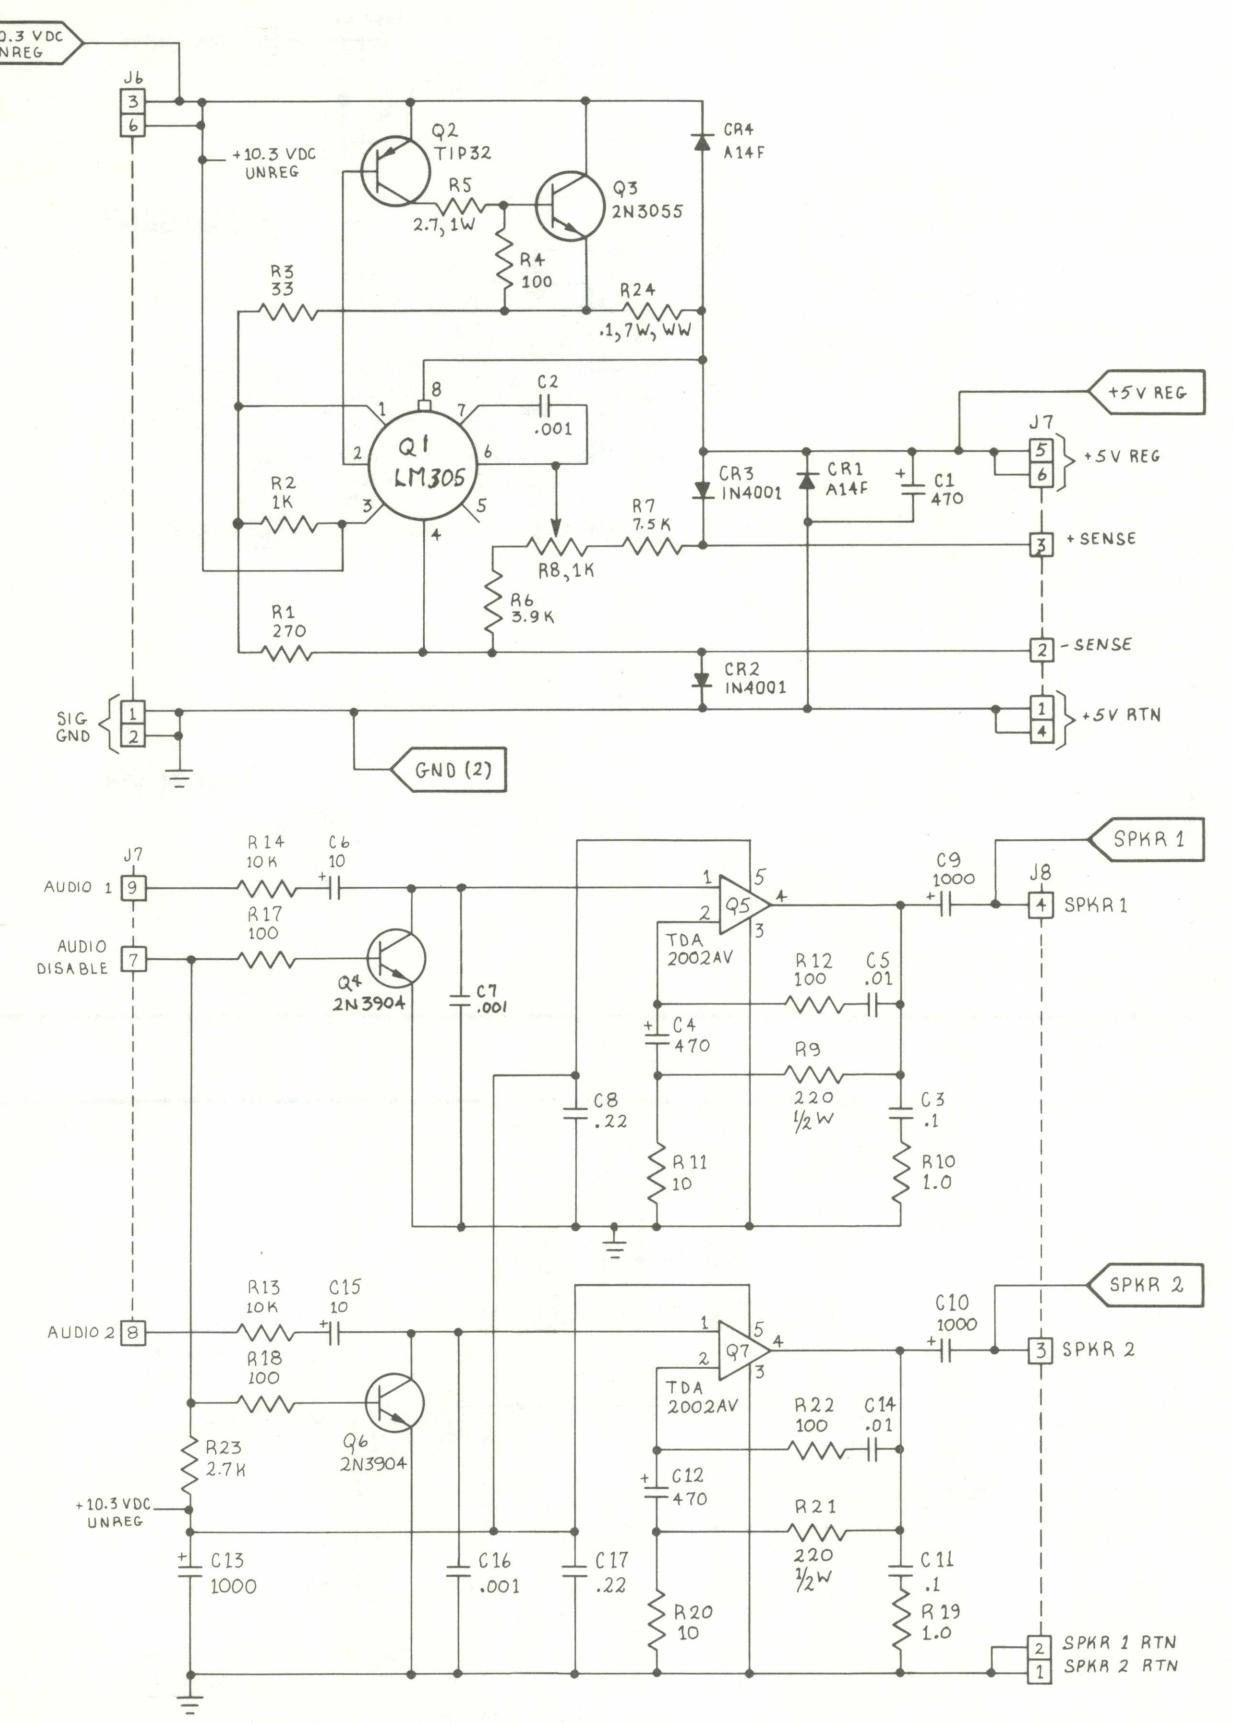

Regulator/Audio PCB 034485-01 A

The Regulator/Audio PCB has the dual functions of regulating the +5 VDC logic power to the game PCB and amplifying the audio from the game PCB.

Regulator Circuit

The regulator consists of voltage regulator Q1, current source power transistor Q3 and Q3's bias transistor Q2. The regulator accurately regulates the logic power input to the game PCB by monitoring the voltage through high impedance inputs +SENSE and -SENSE. The inputs are directly from the +5 VDC and ground inputs to the game PCB. Therefore, the regulator regulates the voltage on the game PCB. This eliminates a reduced voltage due to IR buildup on the wire harness between the regulator and the game PCB. Variable resistor R8 is adjusted for the +5 VDC on the game PCB. Once adjusted, the voltage at the input of the game PCB will remain constant at this voltage.

Regulator Adjustment


1. Connect a voltmeter between +5 V and GND test points of the game PCB.
2. Adjust variable resistor R8 on the Regulator/Audio PCB for +5 VDC reading on the voltmeter.
3. Connect a voltmeter between +5 V REG and GND on the Regulator/Audio PCB. Voltage reading shall not be greater than +5.5 VDC. If greater, try cleaning edge connectors on both the game PCB and the Regulator/Audio PCB.
4. If cleaning PCB edge connectors doesn't decrease voltage difference, connect minus lead of voltmeter to GND test point of Regulator/Audio PCB and plus lead to GND test point of game PCB. Note the voltage. Now connect minus lead of voltmeter to +5 REG test point on Regulator/Audio PCB and plus lead to +5 V test point on game PCB. From this you can see which harness circuit is dropping the voltage. Troubleshoot the appropriate harness wire or harness connector.

Audio Circuit

The audio circuit contains two independent audio amplifiers. Each amplifier consists of a TDA2002AV amplifier with a gain of ten. In Lunar Lander, the AUDIO DISABLE input to the PCB is permanently grounded. Therefore, this audio circuit is always on, even while the game is in the attract mode.

The audio circuit is repeated on Sheet 1, Side B including more information about its operation.

VIDEO POWER SUPPLY WIRING DIAGRAM (034633-01 A)

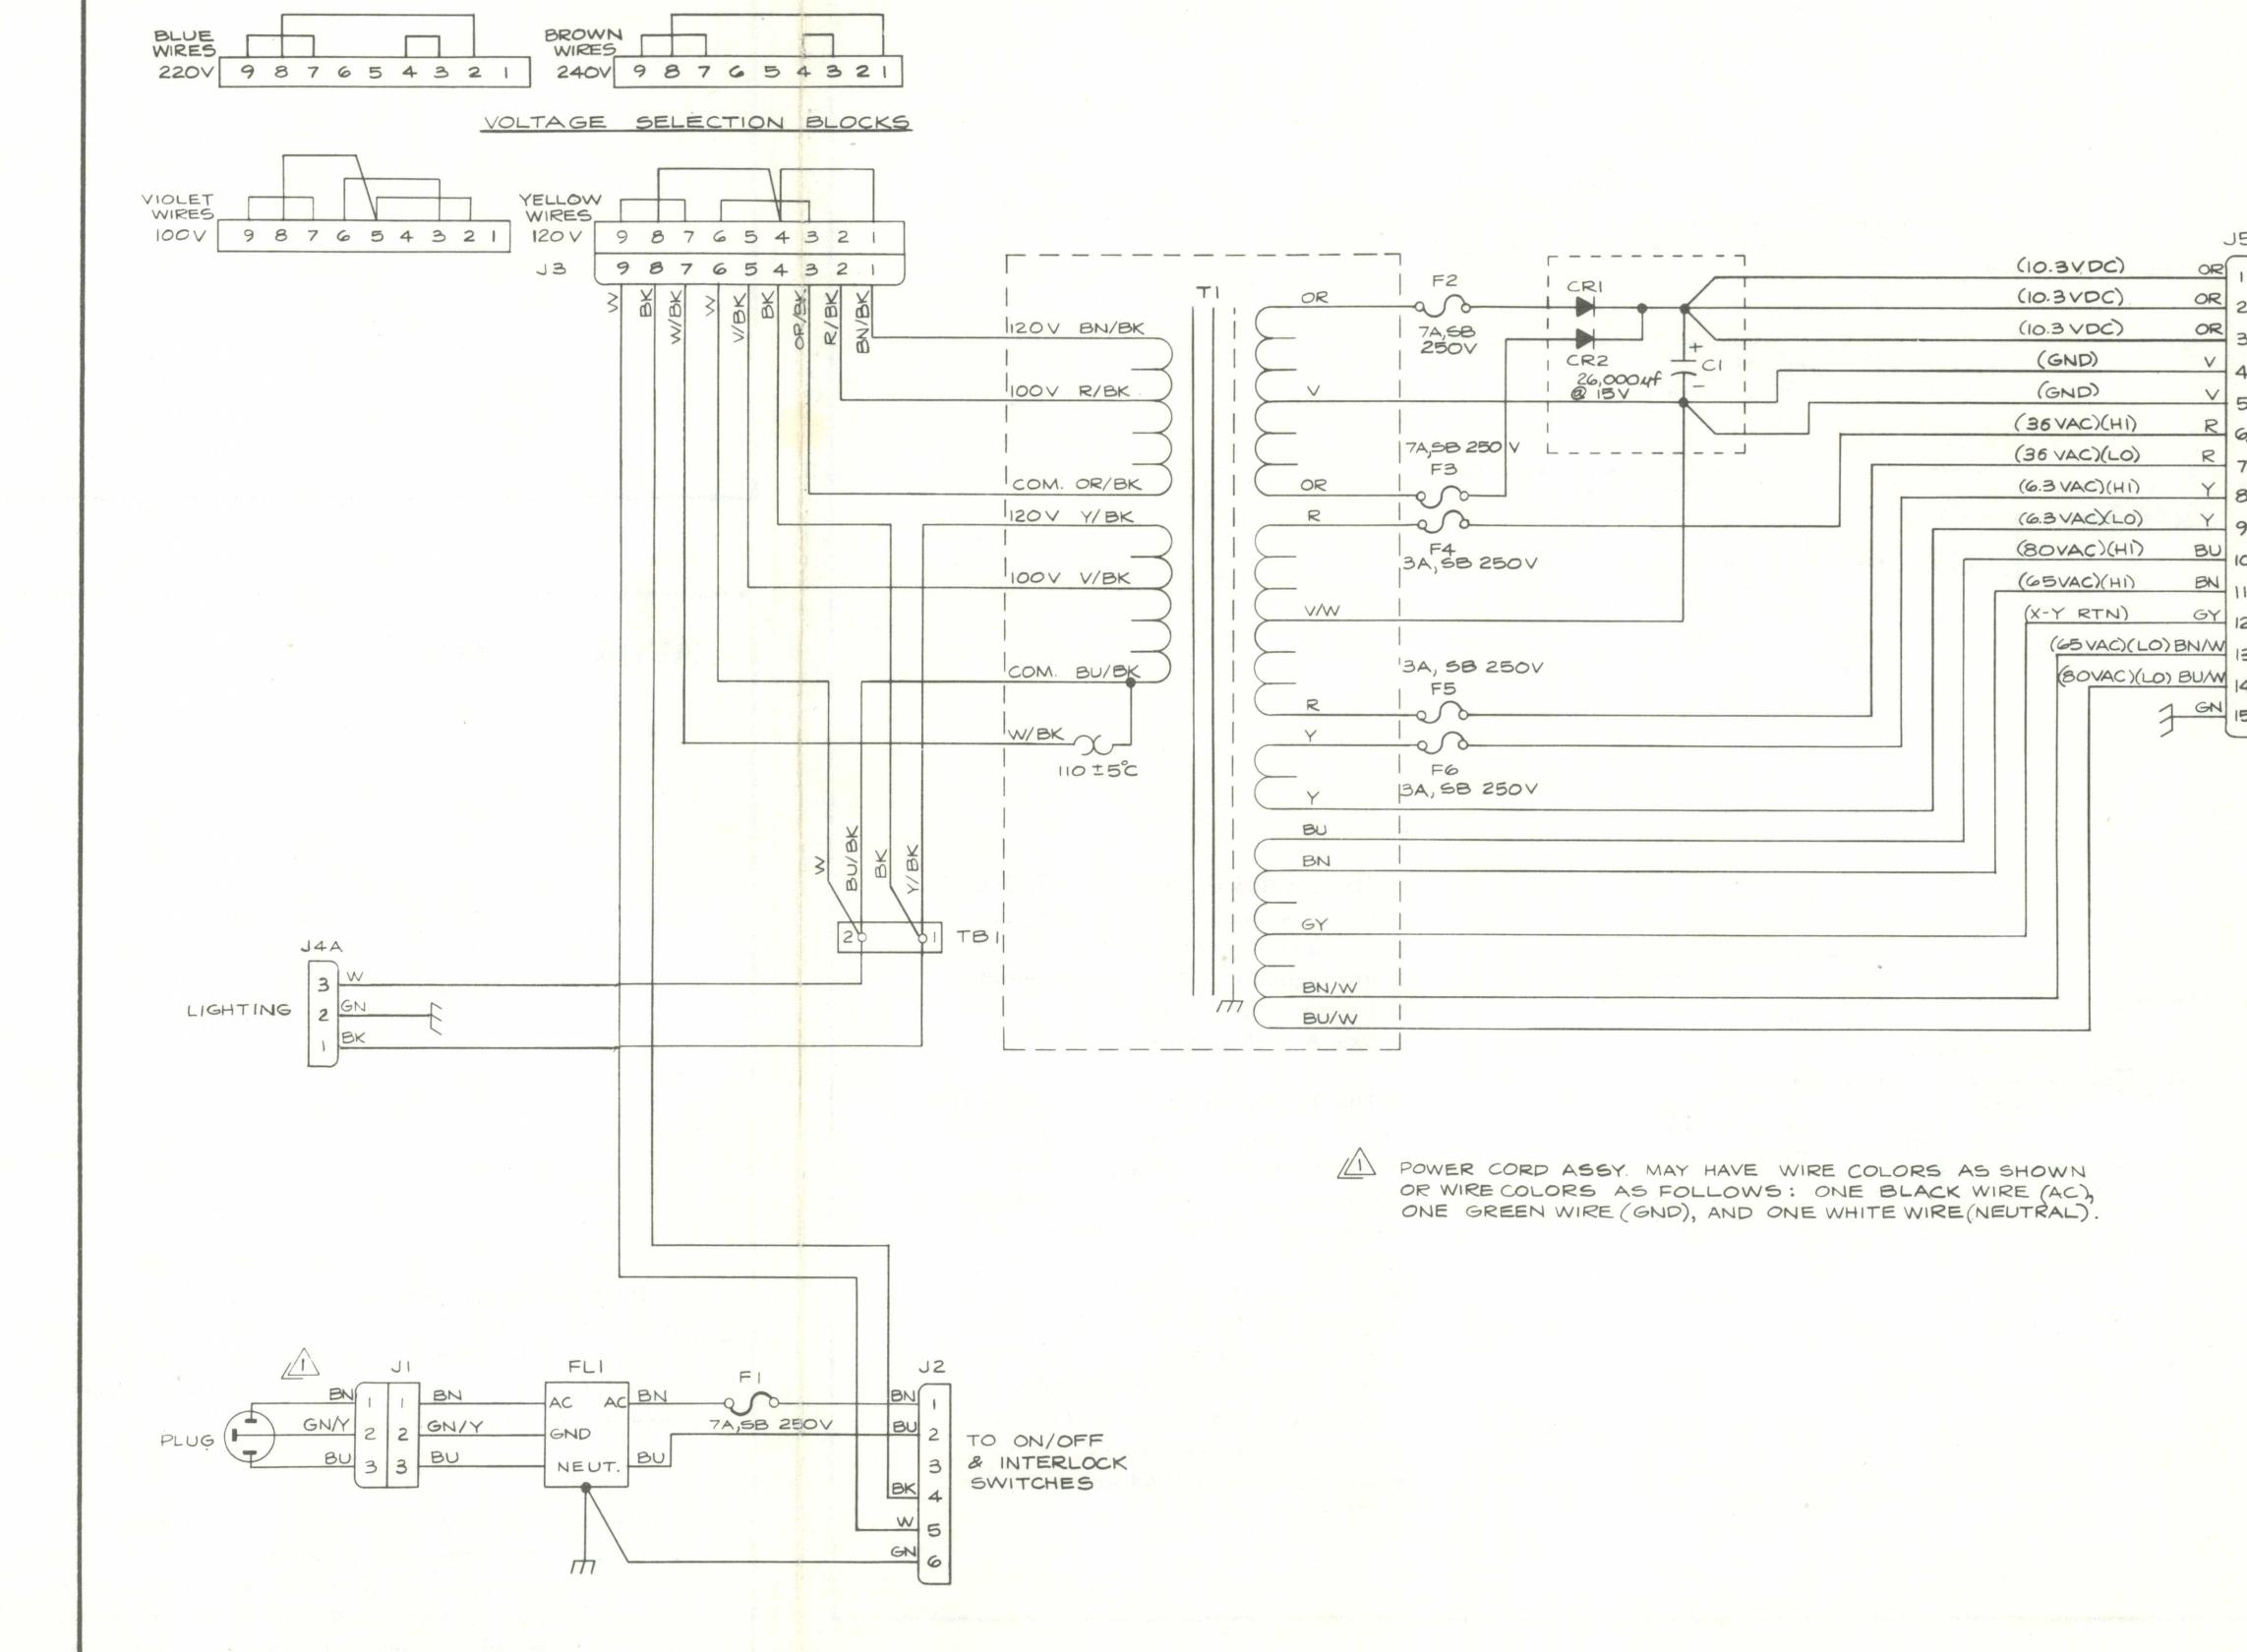

POWER CORD ASSY MAY HAVE WIRE COLORS AS SHOWN OR WIRE COLORS AS FOLLOWS: ONE BLACK WIRE (AC), ONE GREEN WIRE (GND), AND ONE WHITE WIRE (NEUTRAL).


Drawing Package Supplement
to
LUNAR LANDER™
Operation, Maintenance, and Service Manual

Contents of this Drawing Package

Game Wiring Diagram
Power Inputs and Outputs
Microcomputer
Vector Generator

Sheet 1, Side A
Sheet 1, Side B
Sheet 2, Side A
Sheet 2, Side B

LUNAR LANDER WIRING DIAGRAM (034624-01 A)

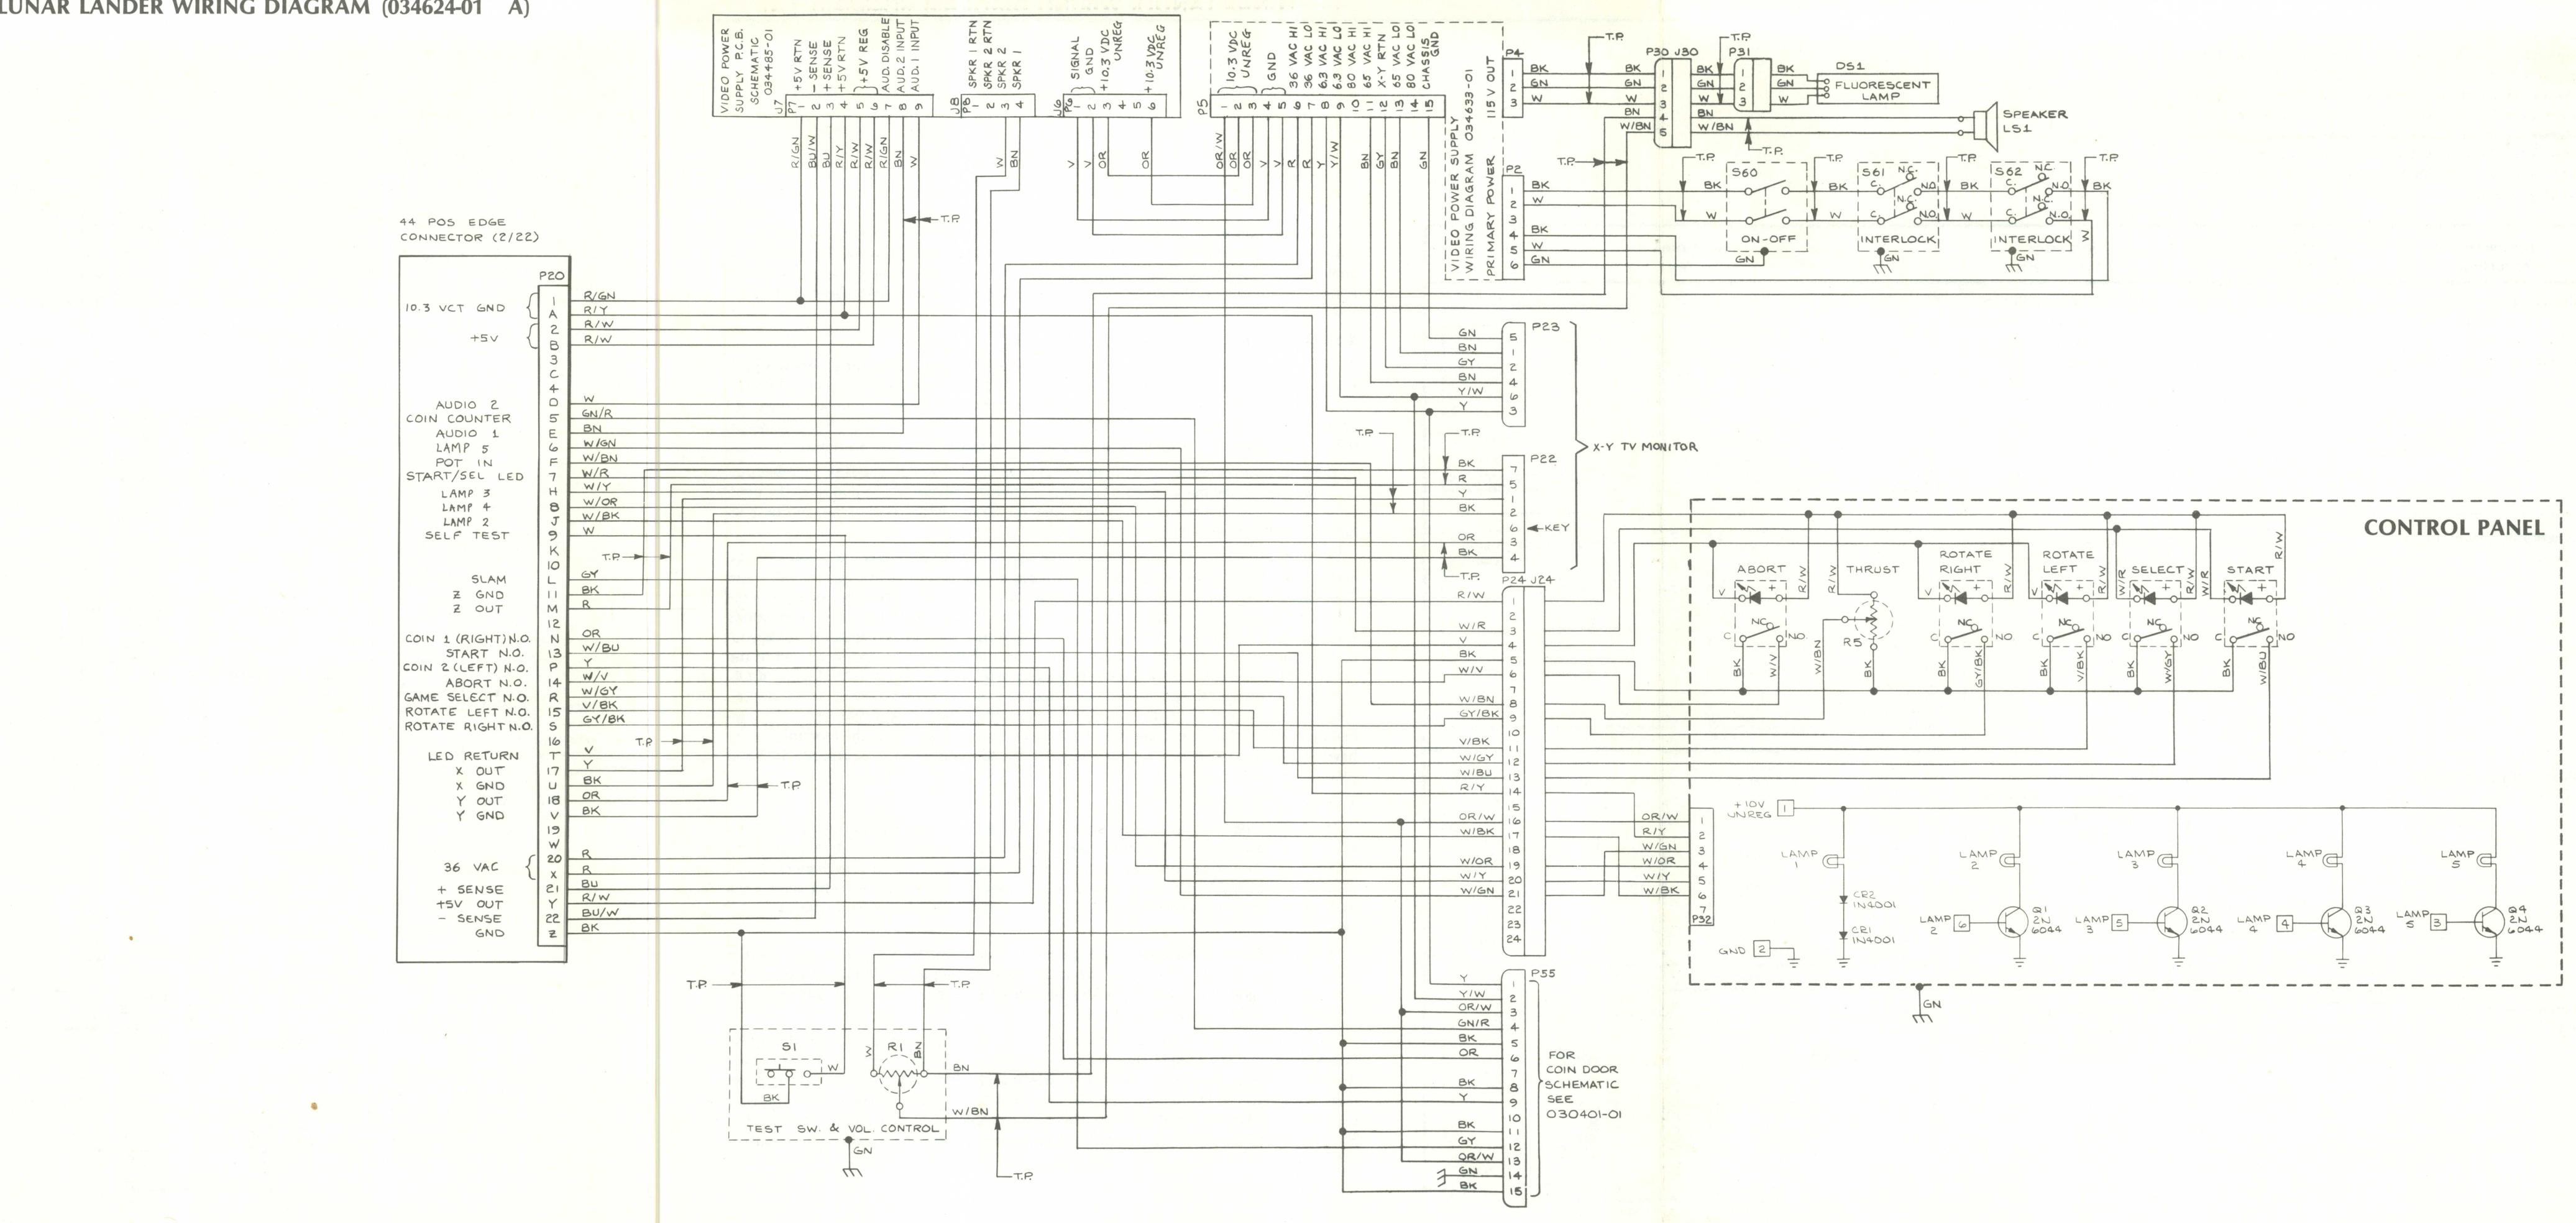

NOTICE TO ALL PIRATES RECEIVING THIS DRAWING
COPYRIGHT © 1979 Atari, Inc. Reproduction of this drawing
without written permission of Atari, Inc., Sunnyvale,
California, is illegal. Atari, the Atari logo, and the
Atari man are registered trademarks of Atari, Inc., and
neither receipt nor possession thereof conveys or transfers
any right to reproduce the drawing. Atari, Inc. reserves
the right to take legal action against anyone who
uses this drawing or any design or technical information
shown therein for manufacture or any other purpose.
This drawing is the property of Atari, Inc. and is
therefore for manufacture by vendors of Atari, Inc.
in accordance with the terms of a valid license.
Any unauthorized use, reproduction, or transfer
of this drawing, or any portion thereof, is a violation
of copyright and may result in criminal and
civil penalties. No right to reproduce this drawing is granted
or implied by this drawing or any other document
in this package.

© Warner Communications Company

© 1979 Atari, Inc.